



New Wi-Fi Ducted **Zone Controller**

FOR FUJITSU DUCTED SYSTEMS

anywAiR® technology

Features

Easy To Use Touch Pad

Mounted portrait or landscape to the wall by a Fujitsu Installer, the anywAiR® technology ducted zone controller is simple to set-up using a Google Play Store account. The touch pad is the central point from which to operate the system and can be used to manage a variety of Android apps such as weather, recipes, music and other home automation apps.



Wi-Fi Control Of Up To 10 Zones

The Fujitsu General anywAiR® technology ducted zone controller provides Wi-Fi control for Fujitsu ducted heating/cooling systems via a wall mounted touch pad. Remote access is available using the anywAiR® App*, giving control of your ducted system anytime, anywhere with selected smartphone and tablet devices. The new technology enables you to run your ducted system efficiently and easily, by controlling up to 10 different zones within your home.

Simple Control Features

Basic control features of the anywAiR® technology ducted zone controller include:



Temperature Controlled VAV[^]

Control temperature and air flow in up to 10 zones



Create up to 12 scenarios

Program scenes through custom settings

0-100%

Variable Air Volume (VAV)#

Select the percentage of air flow for each zone



Timers

Turn the unit on/off after a set time



Touch Pad runs other android apps

Such as weather, recipes and music

Why choose Fujitsu?







Advanced Air Filters



New Zealand's only accredited installation programme



Manufacturer's Warranty





Fujitsu's Catechin Filters are approved by the Asthma and Respiratory Foundation N7's Sensiti Choice® programme.



Fuiitsu is recommended New Zealand

New Zealand's Most Trusted Heat Pump brand

We are proud to have been voted the most trusted Heat Pump brand in the 2020 Reader's Digest Trusted Brands Survey.







Programmable Scenarios

Create up to 12 custom scenes to run a series of commands at the touch of a button or at a chosen time. Commands can include turning the unit on and off, changing the mode or temperature, and selecting which zones are open. Scenarios such as going to work, coming home or bedtime can be programmed to control the air flow and temperature to rooms required at set times.

Variable Air Volume (VAV)#

Variable Air Volume (VAV) control allows the user to select the percentage of air flow for each zone from 0 to 100 percent, in 5 percent increments. This gives you greater control of air flow to each zone to better meet your comfort needs.

Temperature Controlled VAV^


Temperature Controlled VAV is available to zones which have the temperature sensor installed.

This feature allows the user to choose the desired temperature for a zone and the system will automatically adjust the air flow to assist in maintaining each zone's desired temperature.


Mounting

Your anywAiR® touch pad is permanently attached to your wall with the ability to pivot between portrait and landscape modes so that you can enjoy all your apps in the orientation that suits them best. To be installed by a Fujitsu Installer only.

Zone Setting/Dimensions

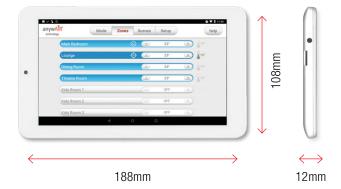

Zone Control[^]

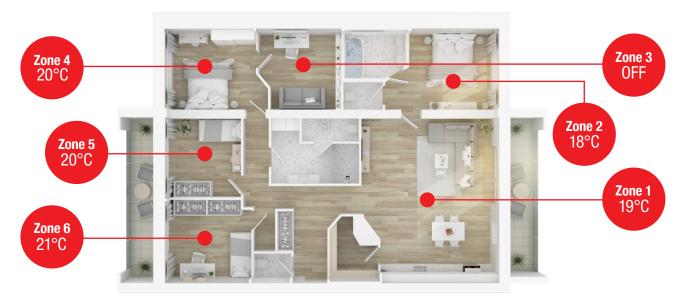




Download the free app to control your air from anywhere

- 1. Download the anywAiR® App from the App store or Google Play
- 2. Follow the App configuration steps
- 3. Once set up, the anywAiR® App interacts with the anywAiR® technology ducted zone controller to remotely control your ducted system.

Actual Size

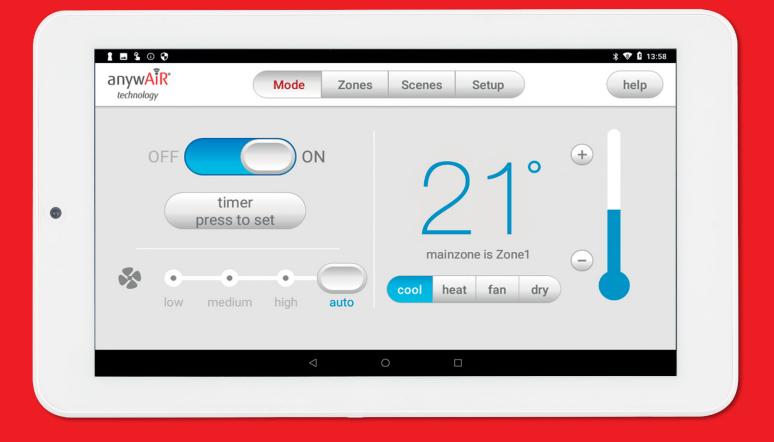

FUJITSU GENERAL NEW ZEALAND A SUBSIDIARY OF FUJITSU GENERAL LIMITED

fujitsugeneral.co.nz

Fujitsu General accepts no liability for incorrect data.

Please ensure you have confirmed installation requirements and pipe sizes prior to install.